


## Lab 7.4.3: Troubleshooting DHCP and NAT

### Topology Diagram

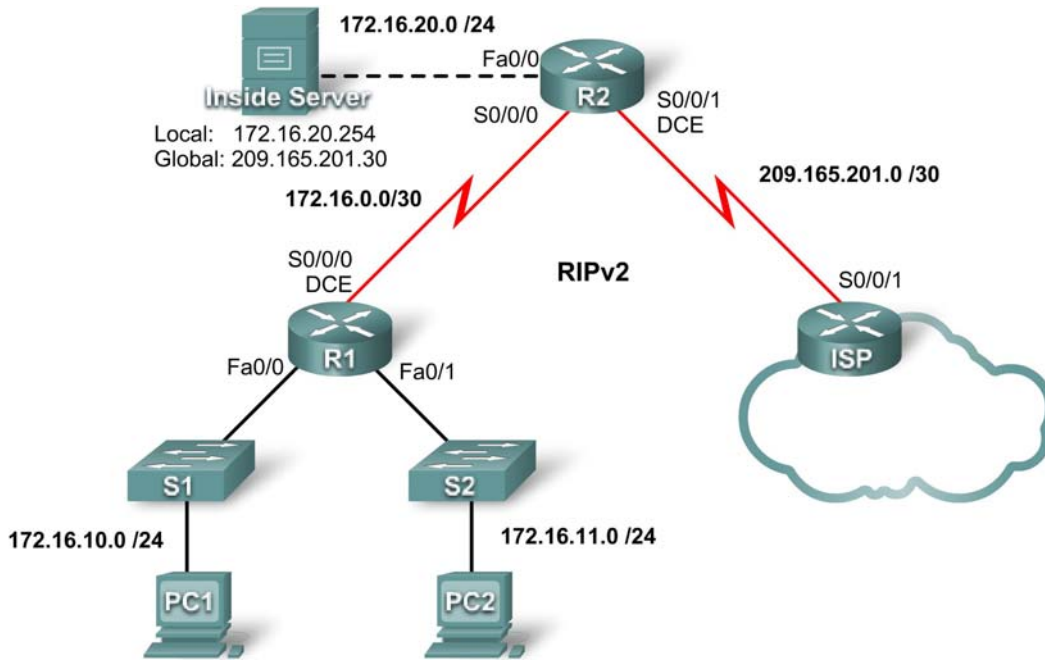

### Addressing Table

Device	Interface	IP Address	Subnet Mask
R1	S0/0/0	172.16.0.1	255.255.255.252
	Fa0/0	172.16.10.1	255.255.255.0
	Fa0/1	172.16.11.1	255.255.255.0
R2	S0/0/0	172.16.0.2	255.255.255.252
	S0/0/1	209.165.201.1	255.255.255.252
	Fa0/0	172.16.20.1	255.255.255.0
ISP	S0/0/1	209.165.201.2	255.255.255.252

### Learning Objectives

Upon completion of this lab, you will be able to:

- Prepare the network
- Load routers with scripts
- Find and correct network errors
- Document the corrected network

## Scenario

The routers, R1 and R2, at your company were configured by an inexperienced network engineer. Several errors in the configuration have resulted in connectivity issues. Your boss has asked you to troubleshoot and correct the configuration errors and document your work. Using your knowledge of DHCP, NAT, and standard testing methods, find and correct the errors. Make sure all clients have full connectivity. The ISP has been configured correctly.

Ensure that the network supports the following:

1. The router R2 should serve as the DHCP server for the 172.16.10.0/24 and 172.16.11.0/24 networks connected to R1.
2. All PCs connected to R1 should receive an IP address in the correct network via DHCP.
3. Traffic from the R1 LANs entering the Serial 0/0/0 interface on R2 and exiting the Serial 0/0/1 interface on R2 should receive NAT translation with a pool of addresses provided by the ISP.
4. The Inside Server should be reachable from outside networks using IP address 209.165.201.30, and to inside networks using IP address 172.16.20.254

## Task 1: Prepare the Network

**Step 1: Cable a network that is similar to the one in the topology diagram.**

**Step 2: Clear all existing configurations on the routers.**

**Step 3: Import the configurations below.**

### R1

```
hostname R1
!
enable secret class
!
no ip domain lookup
!
interface FastEthernet0/0
 ip address 172.16.10.1 255.255.255.0
 ip helper-address 172.16.0.2
 no shutdown
!
interface FastEthernet0/1
 ip address 172.16.11.1 255.255.255.0
 no shutdown
!
interface Serial0/0/0
 ip address 172.16.0.1 255.255.255.252
 clock rate 125000
 no shutdown
!
router rip
 version 2
 network 172.16.0.0
 no auto-summary
!
banner motd $AUTHORIZED ACCESS ONLY$
!
```

```
line con 0
password cisco
 logging synchronous
 login
line vty 0 4
 password cisco
 logging synchronous
 login
!
end
```

## R2

```
hostname R2
!
enable secret class
!
ip dhcp excluded-address 172.16.10.1 172.16.10.3
ip dhcp excluded-address 172.16.11.1 172.16.11.3
!
ip dhcp pool R1_LAN10
 network 172.16.10.0 255.255.255.0
 dns-server 172.16.20.254
!
ip dhcp pool R1_LAN11
 network 172.16.11.0 255.255.255.0
 dns-server 172.16.20.254
!
no ip domain lookup
!
interface FastEthernet0/0
 ip address 172.16.20.1 255.255.255.0
 ip nat inside
 no shutdown
!
interface Serial0/0/0
 ip address 172.16.0.2 255.255.255.252
 no shutdown
!
interface Serial0/0/1
 ip address 209.165.201.1 255.255.255.252
 ip nat outside
 clock rate 125000
 no shutdown
!
router rip
 version 2
 network 172.16.0.0
 default-information originate
 no auto-summary
!
ip route 0.0.0.0 0.0.0.0 209.165.201.2
!
ip nat pool NAT_POOL 209.165.201.9 209.165.201.14 netmask 255.255.255.248
ip nat inside source list NAT_ACL pool NATPOOL overload
!
```

```
ip access-list standard NAT_ACL
  permit 172.16.10.0 0.0.0.255
!
banner motd $AUTHORIZED ACCESS ONLY$
!
line con 0
  password cisco
  logging synchronous
  login
line vty 0 4
  password cisco
  logging synchronous
  login
!
end
```

## ISP

```
hostname ISP
!
enable secret class
!
interface Serial0/0/1
  ip address 209.165.201.2 255.255.255.252
  no shutdown
!
ip route 0.0.0.0 0.0.0.0 Serial0/0/1
!
banner motd $AUTHORIZED ACCESS ONLY$
!
line con 0
  password cisco
  logging synchronous
  login
line vty 0 4
  password cisco
  logging synchronous
  login
!
end
```

## Task 2: Find and Correct Network Errors

When the network is configured correctly:

- PC1 and PC2 should be able to receive IP addresses from the correct DHCP pool as evidenced by an ipconfig on the PCs. Additionally; a show ip dhcp bindings on R2 should show that both PCs have received IP addresses.
- Test pings from PC1 and PC2 to the ISP should receive NAT overload translation as evidenced by a show ip nat translations on R2.
- Test pings from the Inside Server to ISP should receive the static NAT translation indicated on the topology. Use the show ip nat translations command to verify this.
- A ping from the ISP to the global address of the Inside Server should be successful.

- Test pings from ISP to R1 should not receive NAT translation as evidenced by a `show ip nat translations` or a `debug ip nat` on R2.

### Task 3: Document the Router Configurations

On each router, issue the **show run** command and capture the configurations.

### Task 4: Clean Up

Erase the configurations and reload the routers. Disconnect and store the cabling. For PC hosts that are normally connected to other networks, such as the school LAN or to the Internet, reconnect the appropriate cabling and restore the TCP/IP settings.